



Nivel de Transición by ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR CAVAN 2

En D25 N IQQ VOR/DME, abandonar AWY para interceptar R006 (TR186°) IQQ VOR directo a KORAL INT / ESMER INT. Cruzar D17 N IQQ a FL80 o superior, cruzar KORAL INT / ESMER INT a 6000FT o superior, luego según autorización ATC.

At D25 N IQQ VOR/DME, leave AWY to intercept R006 (TR186°) IQQ VOR direct to KORAL INT / ESMER INT. Cross D17 N IQQ at or above FL80, cross KORAL INT / ESMER INT at or above 6000FT, then according to ATC clearance.

DASA / SECCION AIS-MAP