



Nivel de Transición by ATC  
 Transition Level by ATC

No se ajusta a escala / Not to scale

**STAR MENKE 4**

En D25 CAR VOR/DME abandonar AWY para interceptar R017 (TR197°) CAR VOR/DME. Cruzar D21 N FL50 o superior, cruzar RODUT INT (R017 / D16) 3500FT o superior, luego según autorización ATC.

At D25 CAR VOR/DME leave AWY to intercept R017 (TR197°) CAR VOR/DME. Cross D21 N at or above FL50, cross RODUT INT (R017 / D16) at or above 3500FT, then according to ATC clearance.

DASA / SECCION AIS-MAP